• Better Inside, More in Sight •









Milesight | www.milesight.com

MILESIGHT CHINA

Tel: +86-592-5922772

Add: Building C09, Software Park Phase III, Xiamen 361024, Fujian, China

















Reaching the New Level of Intelligent Traffic





Parking Management

Road Traffic Management

Entrance & Exit Management







































The rising of road-related issues, such as traffic congestion, parking problems and road accidents, poses serious challenges to global traffic management agencies and places higher demands on traffic monitoring systems.

Milesight Intelligent Traffic that combines video surveillance with AI, ANPR, 3D Radar and other cutting-edge technologies helps to alleviate these concerns. It helps traffic management agencies systematically and intelligently monitor and understand road users' behavior and gain valuable insights based on real-time data to optimize traffic flow, minimize accident risks, reduce congestion and respond to emergencies more efficiently, which significantly optimizes traffic management and makes transport safer and smoother.





Milesight Intelligent Traffic Solution

Manage Traffic with Innovations

Overview

Featuring powerful LPR functions, Milesight Intelligent Traffic Solution is suited for a variety of application scenarios that require high-performing, easy-to-use and scalable traffic system. The robust solution consists of traffic violation solution, traffic flow control, entrance & exit management and parking lot management, meeting the most needs of traffic planning and management.



Reverse Driving Detection

Traffic Flow Detection



Speeding Detection



Vehicle Attributes Alarm Based on Schedule



Bus Lane Enforcement

Black/White List Management



Parking Violation Detection



Seamless Connection with Access Control Systems

1 | Overview of Milesight Intelligent Traffic



Al-based Vehicle Attributes Recognition



Evidence Camera Linkage



Real-time Parking Occupancy Insights



LPR Smart Search

Overview of Milesight Intelligent Traffic | 2 |



Imagine a camera that can relieve the burden of manually monitoring traffic by human labor, which can detect, read the plates accurately, measure speed to optimize the traffic flow. Milesight provides such excellent AI Road Traffic cameras that go beyond reading plates, but can realize more advanced usage with AI-empowered LPR algorithm embedded. Plus, Milesight AI Road Traffic camera has further integrated with other cutting-edge technologies such as 3D Radar, supplement light, PTZ to significantly expand its core functionality.

How Milesight Fulfills Your Needs on Road Traffic Monitoring

Superior Images + Advanced AI Algorithm + Abundant Usage Scenarios



Failed to capture the fast moving vehicle?

It's always the top concern to capture plates of speedy vehicles in traffic monitoring. Milesight AI Road Traffic cameras adopted the 1/2" large sensor, supplement light and feature 100fps ultra high frame rate with advanced image processing algorithms to capture all clear details of fast moving vehicles during the day and night.

Can't get clear plates at night?

Poor lighting can be another major challenge in traffic monitoring. However, that won't be an issue for us. Milesight adopts supplement light and develops a dedicated LPR Image Mode to enhance the performance of 24/7 traffic monitoring through both hardware and software.



Interested in optimizing the roadside parking resources?

Milesight AI Road Traffic Camera's Parking Detection function can detect the occupancy of up to four roadside parking spaces while timing them, providing real-time updates on available parking spots. It also recognizes vehicle attributes, offering new insights for analyzing and optimizing parking management policies.





Struggle with illegal parking?

With Parking violation detection, the cameras can detect vehicles that are parked illegally. It supports two detection areas for parking violations and vehicle attribute recognition, and determines whether the parking infraction sets off an alert based on the type of vehicle and length of stay. This greatly enhances public safety by enforcing parking regulations and reducing congestion on city streets.

Frustrated about misreads and false positives?

Based on AI deep learning neural networks, our embedded AI LPR algorithms allow the camera to detect and read the plates precisely, reducing false positives and dealing better with smudges, plate variation, lighting changes or different angles than traditional LPR algorithms. Besides, Milesight AI Road Traffic Camera can also realize AI-based attributes recognition such as vehicle type, brand, color and plate color, providing a new level of insights for further analysis.



Traditional LPR Algorithms
High rate of false positives

Milesight AI LPR Algorithms
Focus on plates precisely



Capture results only license plates, too limited?

Milesight Intelligent Traffic cameras support Evidence Camera Linkage, linking LPR camera and regular camera for evidence capture, the former focuses on plate capture and the latter on the big picture to obtain all-around evidence, significantly improving the enforcement efficiency.

3 | Milesight Al Road Traffic Management | 4



Installation difficulty & data transmission delay affect efficiency?

Cutting-edge 5G technology combined with LPR technology enables rapid deployment and improved data transmission, greatly helping authorities to enforce regulations and optimize traffic flow, providing a flexible and efficient solution for temporary traffic control scenarios or remote suburban areas.

What about other advanced functions that customers can benefit from?

- · Real-time traffic data with detailed vehicle features, including plate, plate color, vehicle type, vehicle color, speed, direction and so on.
- · Quick search for the suspected vehicles based on plate, plate color, vehicle type, vehicle color and etc.
- Information about traffic flows with 24/7 car counting.





Reverse Driving Detection



Vehicle from Entering the City

Recommended Models



Al Road Traffic Radar Pro Bullet Plus Camera



Camera

Plus Camera





Al Road Traffic Speed Dome

AI A CO

Al RE H.265+

All 📾 🕏 Re

Al Road Traffic PTZ Bullet

Al Road Traffic 5G Pro Bullet







Al Road Traffic Pro Bullet Plus Camera









Al Road Traffic Supplement Light Pro Bullet Plus Camera









Al Road Traffic PTZ Bullet Plus Camera











Al Road Traffic Parking Detection Pro Bullet Plus Camera









Your Real-time Evidence Capture Partner

Milesight 4G Solar-powered Traffic Sensing Camera releases you from wires for Intelligent Traffic. It's designed to capture vehicle details, making it an easy way to integrate with any third-party ANPR platform for community, law enforcement and police use, even in remote and isolated locations.

Sensitive Radar Detector, Real-time Evidence Catcher

Highly accurate radar plus Al algorithm eliminate capture missing even in low light instant notifications and insights for community or police use with any ANPR platform.



5 | Milesight Al Road Traffic Management Milesight Al Road Traffic Management | 6

Innovations Guarantee a Continuous Use

· Solar-powered and More


More than sunshine, Milesight solar-powered camera also can cycle charging to achieve unlimited use with a large capacity battery and USB Type-C charging port to provide abundant power support, ensuring the uninterrupted operation of the camera.



Solar-powered for Constant Use

· Low Consumption Efficiency

Normally the camera enters a low-power operation state to conserve energy, the quick start mechanism makes it respond quickly when a vehicle approaches, which greatly reduces the waste of energy while achieving accurate real-time capture.

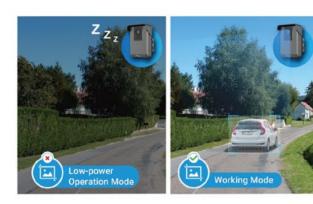

Excellent Structural Design

The camera is independently developed and designed by engineers and has excellent structural performance.

Differentiated appearance design has better concealment, meanwhile, the anti-theft mounting design ensures the security of the camera. What's more, the 3-aixs ball brackets are equipped to adapt to a variety of installation conditions.



Portable to Go Anywhere

Break through the dilemma of troublesome cable, Milesight uses 4G LTE & Solar-powered to enable our camera easy to carry & monitor any area even in remote and isolated locations.







Safety and Efficiency Both in Hand

Queuing, waiting, congestion... The mere sight of these words already makes people feel anxious. However, during rush hours, parking lots are often overwhelmed, leaving people to suffer from the annoying situations. In this regard, an effective Entrance & Exit Management is of paramount importance.

In addition to serving as the first line of defense for vehicle safety, entrance & exit management also can significantly improve parking efficiency by reducing additional human labor and easing traffic congestion.

Considering of this, Milesight Best On-edge Entrance & Exit Management has integrated the latest technologies of Al deep learning, cutting-edge LPR and centralized video management, offering the market with a magic bullet that combines all the benefits.



7 | Milesight Al Road Traffic Management | 8

njoy the Ultimate Parking Experience with Milesight Solution



Waiting Time down Efficiency **UD**

Benefiting from the cutting-edge supplement light LPR camera which can work perfectly with any access control system with built-in Wiegand interface, Milesight Entrance & Exit Management makes a significant contribution for reducing the

Plus the powerful central video management of Milesight VMS Enterprise, the solution is ready to maximize entrance & exit efficiency.

Misreading down Accuracy **UD**

When a vehicle approaches, more than capture license plates numbers, the stunning Milesight Entrance & Exit LPR Cameras can also recognize diverse vehicle attributes, like the type and color of the vehicle, etc.

Besides, no-plate vehicle capture is also available, making details nowhere to escape and significantly elevating the recognition accuracy.





Risks down Safety **Up**

Utilizing cutting-edge technologies, Milesight Entrance & Exit Management lowers the possibility of congestion, decreasing the risks to preserve your security.

Furthermore, the intelligent Black/White List Management of license plates and the non-blind spot Evidence Camera Linkage guarantee safety to the greatest extent, nipping danger in the bud.

echnologies Make Simplicity and **Ultimate Coexist**

Embedded AI LPR Algorithms beyond Plate Recognition

With intelligent AI LPR Algorithms, Milesight Entrance & Exit Management can not only recognize vehicles, plates and read characters correctly. Vehicle attributes recognition such as vehicle type, brand, color and plate color can also be recorded to grow your parking business.



Simpler Video Management, **Higher Security**

Energized by Milesight VMS Enterprise, Milesight Best On-edge Entrance & Exit Management can provide you with a more complete experience. Recording, collecting, and analyzing - all in one step, greatly simplifies the process and enhances your safety.

Recommended Models




Entrance & Exit AI LPR Pro **Dome Camera**





Entrance & Exit AI LPR **Bullet Camera**



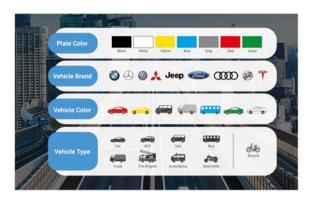

Better Image Quality for 24/7 Monitoring

With Milesight Entrance & Exit Supplement Light AI LPR Pro Bullet Plus Camera in the solution, which features impressive supplement light and advanced technologies like 140dB Super WDR, all the details are nowhere to escape, enabling precise license plate recognition and effective round-the-clock surveillance.





Entrance & Exit Supplement Light AI LPR Pro Bullet Plus Camera







Go Far with Milesight VMS Enterprise








9 | Milesight Entrance & Exit Management Milesight Entrance & Exit Management | 10 |



A Smarter Way to Manage Parking Lot

Milesight is introducing a new power of AloT to provide a new and smarter way to do parking management. The Milesight AloT Indoor Parking Management Suite creatively combines Al Deep Learning, On-camera LPR, LoRa and dual-ultrasonic technologies to help optimize the parking process and management more efficiently.

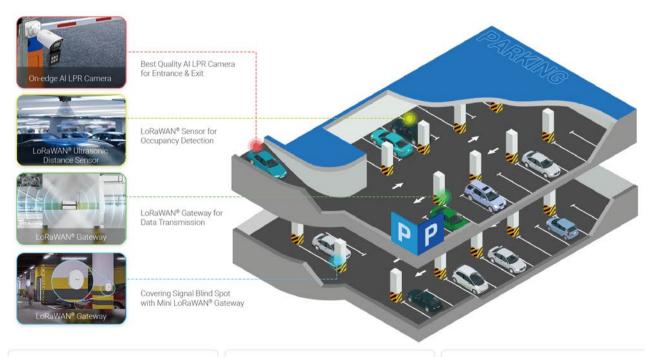

Best Quality AI LPR Camera for Entrance & Exit



LoRaWAN® Sensor for **Occupancy Detection**



LoRaWAN® Gateway for Data Transmission

A Number of Reasons to Choose Milesight Solution

Accurate On-edge ANPR

Designed for demanding LPR applications, Milesight professional LPR camera can recognize the plates rapidly and precisely as vehicle approaches the gate with the dedicated and embedded AI LPR algorithms.



Easy Deployment

The solution can ensure the most simplified deployment and least installation labor. Thanks to the LoRa-enabled technology, you'll never bother to wire the network cable for sensors, as the devices communicate wirelessly.



Long Battery Life by Lower **Power Consuming**

LoRa technology enjoys a lower power consuming that allows LoRaWAN® sensors and gateways to operate steadily with longer battery life, greatly saving maintenance costs.



More Affordable with Lower Unit Cost

Milesight LoRaWAN® based solution is easy to get started and more affordable because of the low per-unit cost, fitting for more use cases that would like to have parking management solution at lower costs.



Flexible and Expandable

Integrating our flexible solution into your existing parking system is much easier than you think. And Milesight in-house solution is easy to expand and customize to suit your exclusive needs with open APIs and versatile protocols.



Environmental-friendly

With so many cutting-edge technologies combined, our greener solution optimizes the parking process which reduces air pollution, CO₂ emission and fuel consumption. Thus a more effective as well as environmental-friendly parking facility can be created.

11 | Milesight AloT Indoor Parking Management Milesight AloT Indoor Parking Management | 12


An Enjoyable Parking Experience with AloT

Al Together with LPR

Embedded AI LPR Algorithms beyond Plate Recognition

In contrast to conventional LPR algorithms, Milesight AI LPR algorithm adopts a deep learning neural network model that has been developed specifically for LPR. This allows the camera to recognize vehicles, plates and read characters correctly.

In addition, our LPR camera can realize Al-based attributes recognition such as vehicle type, vehicle color and plate color, providing more insights to grow your parking business.

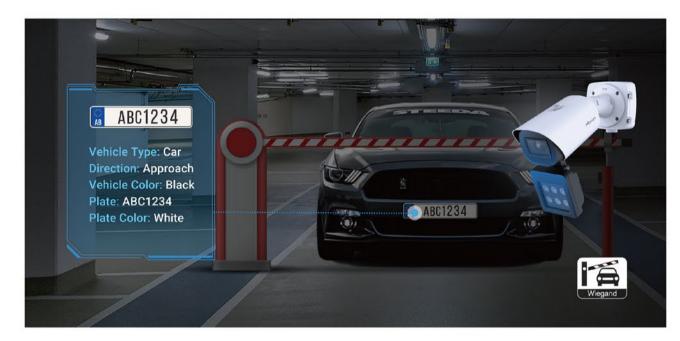

Supplement Light for LPR Cameras Provides Better Image Quality

Milesight incorporates White LED or IR LED supplement light to AI LPR cameras that provide more lighting sources to achieve plate and vehicle recognition in the best quality 24 hours a day, 7 days a week round-the-clock operation for access control.



Wiegand Protocol Supported for Access Control System Compatibility

Milesight Entrance & Exit Supplement Light AI LPR Camera can be easily integrated with your existing access control system via Wiegand protocol.



IoT Empowered by LoRa Technology

What are LoRa and LoRaWAN®?

LoRa is a new wireless technology designed specifically for long-range, low-power communications. LoRaWAN® is the protocol built on top of the LoRa modulation, designed to wirelessly connect battery-operated 'things' to the internet.

How is LoRa Technology Helping Indoor Parking Management?


For indoor parking management applications, LoRa technology allows the occupancy data to be transmitted effectively in the open parking lots and guarantee the least installation and operation costs thanks to the wireless and low power features.



Dual Ultrasonic Detection LoRaWAN® Sensor

The advanced LoRaWAN® sensor EM310-UDL uses a dual ultrasonic beam with a measurement range from 3cm to 450cm, resulting in an ultra-short blind spot, which provides high-precision parking space occupancy status for parking management systems.



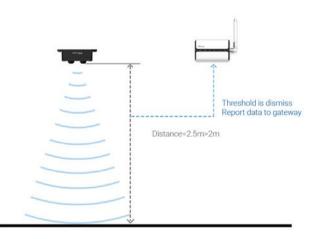

Recommended Models



On-edge ANPR Camera
Entrance & Exit Supplement Light AI LPR Pro



Data Transmission for a Wide Area Semi-Industrial LoRaWAN® Gateway UG65



Detect Space Occupancy Wirelessly at Low Power LoRaWAN® Ultrasonic Distance/Level Sensor EM310-UDL




Covering Signal Blind Spot Mini LoRaWAN® Gateway UG63



Lead the Intelligent Way of Outdoor Parking Management

With the advancement of modernization, the present era has witnessed a huge growth in vehicle ownership, particularly in urban areas. Thus, an intelligent outdoor parking solution is essential to provide a better life quality in urban areas as well as plays an important role in the development of smart cities.

In terms of this, Milesight offers an intelligent camera-based AI outdoor parking management solution that tailors the market to ease the facing problems, like the inefficient and costly parking management system for large car parks and difficulties in finding parking spaces for drivers, driving better parking mobility.

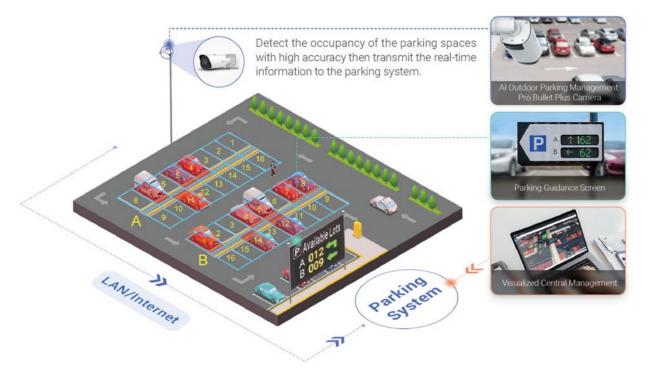

ocus on What Really Matters in Outdoor Parking



For Operators

- · Low-efficiency management of large car park
- · Poor utilization of parking spaces
- Unreliable and costly parking management system
- Losing client loyalty

For Drivers

- · Waste of time in finding parking spaces
- More fuel consumption and CO₂ emission during parking spaces seeking
- A frustrated parking experience caused by traffic congestion

Level up Parking Experience with Milesight Solution



1 Camera2 Detection Modes

- Flexible Switching Between Occupancy Detection & Occupancy Detection+LPR Mode.
- Up to 100 Parking Spaces in Real-time.
- Smart Al LPR Functions.
- High Precision Occupancy Detection.

15 | Milesight Al Outdoor Parking Management | 16

1 Sharp Eye 24/7 Reliable Detection at Any Time

- Embrace Milesight Parking Image Enhancement Technology, Sony 4K 1.8" STARVIS 2 Sensor, and IP67
- Provide a 24/7 accurate and reliable detection with sharp details.



1 Integrated Solution 100% High Management Efficiency

- · Support CGI/APIs to be easily integrated with your existing parking system, like the smart guidance and visualized central management platform.
- Realize an integrated management solution with real-time parking spaces occupancy detection and super-high efficient parking guidance.



1 User-oriented Parking Facility 100% Customers' Satisfaction

- A smarter and user-oriented outdoor parking facility empowered by AI deep learning.
- · Build up your customers' satisfaction and loyalty.
- · Bring repeat business and increase your turnover.



1 Joyful Parking Experience for Drivers 100% High Parking Efficiency

- · Quick parking by smart parking guidance with near-zero traffic congestion.
- Fuel savings and emission levels reducing.




Boost Outdoor Parking Management with **Milesight Innovations**

Intelligent AI Parking Detection

Occupancy Detection based on Al algorithm can realize simultaneous detection and management of up to 100 parking spaces with up to 98% detection accuracy.

Parking Detection with LPR based on AI LPR algorithm can realize simultaneous detection and management of up to four parking spaces, and identification of information of parked vehicles.

These two parking management modes greatly help guide parking and realize more efficient and intelligent parking management.

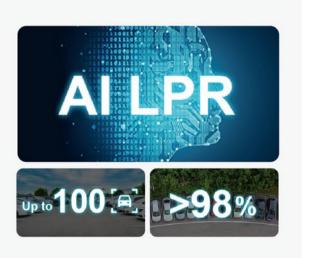

Parking Image Enhancement Technology

Milesight innovatively adopts the leading Parking Image Enhancement Technology, which is based on image frame accumulation, to obtain images of unsurpassed clarity in almost dark conditions. No scare about the night, no missing any detail with reproducing sharp images, enabling high-accuracy detection round-the-clock.









Visualized Management and Flexible Configuration

Milesight Al Outdoor Parking Management Camera brings the visualized management with the red overlay of the occupied parking spaces, a more intuitive way to detect the entire parking area, facilitating a visualized central management by integrating the camera to your parking system. Moreover, the flexible configuration just makes the start of intelligent outdoor parking management a piece of cake.

17 | Milesight Al Outdoor Parking Management

Impressive High Compatibility

To maximize the usability and compatibility, the Al Outdoor Parking Management Camera supports CGI/APIs, which allows the easy open integration with third-party platforms. The network protocol such as HTTP(s) offers a wide range of options for data processing. The parking information is transmitted to the third-party parking system to help form a complete set of solutions, guide the driver to find the parking space guickly and realize intelligent management.



Discover Our Solution





MS + ANPR Integration

Based on years of R&D experience in security industry, Milesight is capable of providing comprehensive and highly-integrated security solutions with front-end devices and back-end management software. Milesight VMS Enterprise is a robust and centralized software platform that can work well with Milesight LPR cameras to get recognized license plates, detected speed and achieve advanced functions for entrance & exit management or intelligent traffic monitoring solutions.

Get Intuitive Liveview and Accurate ANPR Results

Featuring high-performing ANPR functions and the dedicated interface, Milesight VMS Enterprise provides the most user-friendly all-in-one ANPR solution that fully integrates with LPR cameras.

Search and Locate Vehicles Faster and Smarter

The convenient ANPR Search enables operators to quickly search and locate the associated videos based on target vehicle's features, such as vehicle color, plate color, plate number, vehicle type and direction.

Various Events & Alarm Actions

In Milesight VMS Enterprise, users may easily set various events rules and the corresponding alarm actions to maximize traffic safety and productivity. Taking Black/White List Event as an example, if a plate is recognized as the one on the pre-defined black list, related event actions will be triggered based on the pre-configured Black/White List alarms.



19 | Milesight Al Outdoor Parking Management Back-end Integration of Milesight Intelligent Traffic | 20

Manage Lists Flexibly to Level up ANPR Management

- Add recognized license plates to a white/black list easily in ANPR preview
- The plates that are in accordance with customized rules will be added to the group automatically
- Support configuring the rules and actions for each group separately



Radar Data Integration for Traffic Flow Control

- Receive real-time detection data such as vehicle speed and direction from Milesight Al Road Traffic Radar Camera
- Get instant alerts in VMS when a vehicle drives over-speed or drives in the wrong direction
- Monitor and take actions basing on the alarm triggered by counting data that exceeds the limit



NVR + ANPR Integration

Defined as the Enterprise ANPR management system, Milesight NVR becomes the central management site to easily monitor the traffic, including the real-time preview of the car plates, smart analysis and other more detailed settings.





CMS + ANPR Integration

Milesight CMS provides a total solution for Milesight LPR cameras and NVRs, to achieve powerful ANPR management more conveniently. With high-efficient management performance, Milesight CMS is ideal for receiving plate recognition results, managing events triggered by plates on blacklists or whitelists, etc., realizing a superior experience in such a centralized system.





Precise Capture

Designed for a wide range of applications in traffic monitoring, Milesight Intelligent Traffic cameras are capable of achieving extremely high-quality and reliable license plate capturing in high accuracy. With the powerful capturing performance, Milesight Intelligent Traffic cameras can deliver clear and detailed images of capture results, facilitating effective license plate recognition applications in various scenarios.

Superior Image Quality for 24/7 Traffic Monitoring

LPR Image Mode



• HLC (Highlight Compensation)





Integrated Supplement Light



· 0.002Lux Starlight





Excellent Capture Performance at High Speed and Accuracy

200km/h Recognizable Speed

100fps High Frame Rate

>98%
High Recognition Accuracy





21 | Back-end Integration of Milesight Intelligent Traffic

Al-empowered LPR

When AI meets LPR, a whole new world of possibilities opens up, as the camera can not only achieve highly accurate recognition in challenging lighting and environmental conditions, but also identify vehicle features that can then be searched by LPR Smart Search function for handy traffic monitoring.

Embedded AI LPR Algorithm

- · Based on AI deep learning neural network
- Detect and recognize vehicles, plates and characters precisely in real-time
- Deal better with smudges, plate variation, lighting changes or different angles compared to traditional LPR algorithm



Al-based Vehicle Attributes Recognition

Besides the high accuracy license plate recognition powered by embedded AI LPR algorithm, Milesight Intelligent Traffic camera can also realize Al-based attributes recognition such as vehicle type, brand, vehicle color and plate color, helping gain a new level of insights for further analysis.

Vehicle Type



· Non-motorized Vehicle

















Volkswagen

Tesla

Vehicle Brand













Vehicle Color
















ntegrated 3D Radar



Milesight innovatively combines 3D Radar, Al and LPR technologies to create a camera that can not only identify vehicles and read plates accurately, but also precisely provide extra real-time data of vehicle position, direction and speed, etc. The all-in-one Road Traffic Radar Camera is easy to install as the 3D radar module is already integrated into the camera directly, realizing the hassle-free traffic flow monitoring solution.

Excellent Radar Capabilities for Road Monitoring

Adopting 60GHz FMCW radar, Milesight 3D radar technology allows Milesight Al Road Traffic Radar Camera to cover 4 lanes and 32 vehicles detection at one time and detect the high driving speed up to 200km/h with just a compact size of radar module.





Detection Distance



Directions





Detected at One Time



Counting


3D Radar Localization

The 3D radar provides a three-dimensional view of range, altitude and direction which can precisely locate the vehicle compared to conventional radar technology, greatly enhancing the usability of Milesight ANPR solutions with visualized vehicle position.



Accurate Detection for All Weather Conditions

Furthermore, the 3D radar enjoys higher environmental adaptability that can offer precise information in any weather conditions, at any time of day or night, greatly lowering the cost of false alarms.

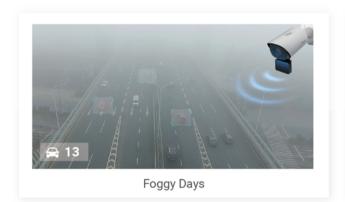



Rainy Days




Strong Light Environment

Plate Management & Search

Besides exceptional capture and recognition performance, Milesight Intelligent Traffic cameras feature on-camera plate management for black/white lists which can also be configured based on schedules. And LPR Smart Search enables security operators to search and quickly find relevant videos for further investigation.

Black/White List Management

Milesight Intelligent Traffic cameras can automatically identify license plates based on the embedded black/white lists, allowing for efficient entrance & exit control by taking instant actions according to the plate types.

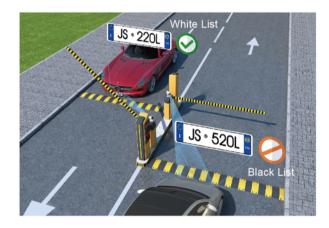

List Scheduling Management

Milesight Intelligent Traffic cameras provide accurate identification and support list scheduling management, ensuring extremely flexible and customizable gate control with enhanced security to fulfill the management needs for different days and time periods.



LPR Smart Search

With Milesight LPR Smart Search, relevant videos can be found quickly by searching for only a portion of the target suspect vehicle's attributes, such as vehicle color, plate color, plate number, vehicle type, direction and etc., ensuring efficient event investigations and intelligent traffic monitoring.



Elexible Deployment

Milesight is committed to bringing to market the most user-friendly and high-performing products and solutions. For applications on traffic monitoring, Milesight offers a number of options to guarantee the flexible deployment of Milesight Intelligent Traffic systems.

Stand-alone LPR Solution

With the built-in AI LPR algorithm and embedded black & white lists, Milesight Intelligent Traffic cameras enable to achieve stand-alone solutions for license plate recognition, realizing the fast implementation for scenarios such as gates or barriers controlling in high efficiency and accuracy.



Closed-loop ANPR Solution

Milesight Intelligent Traffic cameras can well work with Milesight own back-ends including Milesight NVR, CMS and Milesight VMS Enterprise to form completely closed-loop ANPR solutions. The highly integrated system guarantees a smooth experience in traffic and road management, as well as entrance & exit management.



3rd Integration with CGI/APIs

To maximize the usability, Milesight Intelligent Traffic camera also offers various CGI/APIs and supports interfaces and protocols like Wiegand, TCP, HTTP, MQTT, etc., which allow the easy open integration with third-party VMS or platforms, realizing solutions such as traffic management, toll collection, and entrance & exit management.





Easy Setup


Start Milesight Intelligent Traffic Camera Easily


Milesight provides a series of clear and detailed installation guides as well as tutorial videos to ensure easy installation and configuration of Intelligent Traffic cameras. With the most user-friendly user interface, you can get the LPR configuration done efficiently, saving time and learning costs significantly.



For the best possible license plate capture, installing the camera in a proper location as suggested below is highly recommended.



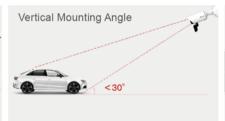







Simple Steps for Radar Camera Configuration

After installing AI Road Traffic Radar Camera in an appropriate position, users will just need to fill in a few parameters to get the configuration done easily. By filling in parameters such as Installation Height, Radar Tilt Angle, Camera Direction and Trigger Distance, the results of AI Road Traffic Radar Camera detected and recognized will be precisely matched to corresponding vehicles in multiple lanes, enabling efficient and accurate traffic monitoring.

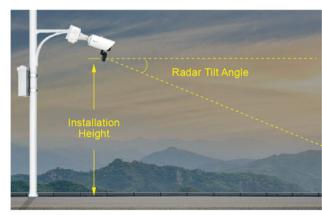

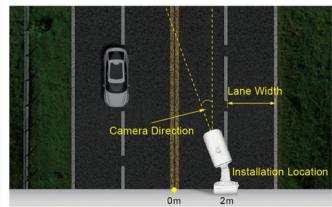

27 | Key Features of Milesight Intelligent Traffic | 28

Broad Regions and Countries Support

Backed up by strong R&D strength and accumulated expertise in LPR applications, Milesight Intelligent Traffic solution can be well applied to broad regions and countries worldwide. We've now covered a wide range of areas including:




State Name			Country Name		
	Armenia	China	Hong Kong (China)	India	Indonesia
Asia	Israel	Japan	Kazakhstan	Kyrgyzstan	Macau (China)
	Malaysia	Philippines	Singapore	South Korea	Taiwan (China)
	Tajikistan	Thailand	Turkmenistan	Uzbekistan	Vietnam
	Austria	Albania	Azerbaijan	Belarus	Belgium
	Bosnia and Herzegovina	Bulgaria	Croatia	Czech	Cyprus
	Denmark	Estonia	Finland	France	Georgia
Europe	Germany	Greece	Hungary	Italy	Iceland
	Ireland	Latvia	Lithuania	Luxembourg	Macedonia
	Malta	Moldova	Montenegro	Netherlands	Norway
	Poland	Ukraine	Slovakia	Switzerland	Russian
	Turkey	Portugal	Romania	Serbia	Slovenia
	Spain	Sweden	United Kingdom	Vatican City	
Middle East	Bahrain	Kuwait	Iran	Iraq	Oman
Miluule East	Qatar	Saudi Arabia	United Arab Emirates		
North America	Canada	Mexico	United States		
South America	Argentina	Brazil	Chile	Ecuador	Uruguay
Africa	Angola	Algeria	South Africa	Morocco	
Oceania	Australia	New Zealand			

Various Models Available

Boasting multiple models including Bullet, Dome, PTZ and Radar models, Milesight covers a wide range of intelligent traffic products from entry level to advanced to meet various requirements. Multiple applications like highways, intersections, parking lots, etc. are able to well safeguarded by the matched cameras.

Diversified Lens Options

Cameras equipped with motorized zoom & focus lens allow remote control of focal length, iris and focus through the use of a lens controller, which are perfect for long distance surveillance in areas such as parking lots, highways and ports. And auto focus lens helps zoom up to distant objects while still maintaining the clarity, delivering high quality video over the entire zoom image.

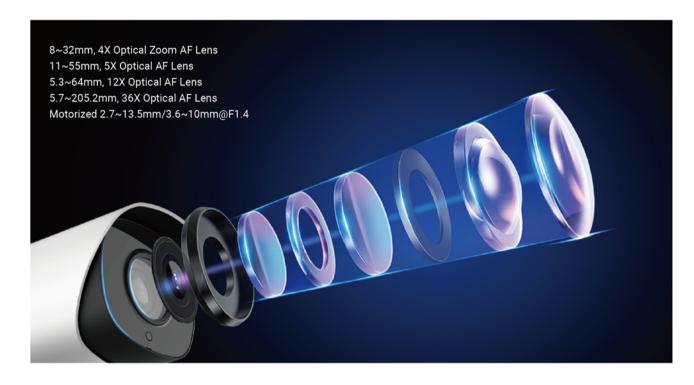

Multiple Installation Modes

Additionally, various installation modes including pole-mount, wall-mount and pendant mount, are ideal for the better monitoring of different application scenarios. Having a variety of good mounting options to choose from enables you to place the camera in convenient locations and more easily deploy cameras where you need.



Highway





Intersection

Milesight Intelligent Traffic Cameras







Milesight Road Traffic Management

ONVIFIGOST All 3D Radar Supplement LPR

KEY FEATURES

- · Advanced AI LPR Algorithm
- · Traffic Flow Statistics and Analysis
- Evidence Camera Linkage
- · No-plate Vehicle Detection
- Reverse Driving Vehicle Detection
 LPR Smart Search Function
 License Plate Administration

- Superior Image Quality
 Maximized Flexibility

			50, Y	Maximized Flexibility		
			Al Road Traffic Pro Bullet Plus Came	ra		
	Model	TS2866-X4TPE(2MP)	TS2966-X12TPE(2MP)	TS8266-X4PE(4K)		
	Appearance					
	Image Sensor	1/2" Progressive Scan CMOS	1/2.8" Progressive Scan CMOS	1/1.8" Progressive Scan CMOS		
	Min. Illumination	Color: 0.002Lux@F1.6 B/W: 0Lux with IR on	Color: 0.005Lux@F1.6 B/W: 0Lux with IR on	Color: 0.009Lux@F1.6 B/W: 0Lux with IR on		
	WDR	140dB St	uper WDR	120dB Super WDR		
	Lens	8~32mm, 4X Optical Zoom	5.3~64mm, 12X Optical Zoom	8~32mm, 4X Optical Zoom		
	Field of View	H44°~H13°/D51°~D15°/V25°~V7°	H61°~H5°/D69°~D5°/V36°~V2°	H44°~H13°/D51°~D15°/V25°~V7°		
	Max. Vehicle Speed		200km/h			
	Recognition Accuracy		>95%			
	Coverage	Si	upport simultaneous detection of 4 regi	ons		
Road Traffic Management			More than 80 countries and regions			
	Illumination Distance	Un to 70m dur	ing the day; Up to 35m during the night v	with illumination		
	Attributes Identification	Plate Color, Vehicle Type, Vehicle Color, Vehicle Brand, No-plate Vehicle Capture				
	Smart Traffic Function					
			Vehicle Counting Based on Vehicle Type			
	Interface		udio I/O, Alarm I/O*2, PoE (802.3at), DC			
	Compatibility	A	API, HTTP, TCP, ONVIF Profile G & Q & S &	& T		
		AI R	oad Traffic Radar Pro Bullet Plus Car	nera		
	Model	TS2866-X4TVPE(2MP)	TS2966-X12TVPE(2MP)	TS8266-X4VPE(4K)		
	Appearance		10			
	Image Sensor	1/2" Progressive Scan CMOS	1/2.8" Progressive Scan CMOS	1/1.8" Progressive Scan CMOS		
	Lens	8~32mm, 4X Optical Zoom	5.3~64mm, 12X Optical Zoom	8~32mm, 4X Optical Zoom		
	Field of View	H44°~H13°/D51°~D15°/V25°~V7°	H61°~H5°/D69°~D5°/V36°~V2°	H44°~H13°/D51°~D15°/V25°~V7°		
	Max. Vehicle Speed		200km/h			
	Recognition Accuracy		>95%			
	Coverage	Su	pport simultaneous detection of 4 region	ons		
Road Traffic	Country Region Supported		More than 80 countries and regions			
Management	Illumination Distance	Up to 70m duri	ng the day; Up to 35m during the night w	ith illumination		
	Attributes Identification		color, Vehicle Brand, No-plate Vehicle Ca Speed Detection, Traffic Flow Detection			
	Smart Traffic Function	Evidence Camera Linkage, V	ehicle Counting Based on Vehicle Type,	Specific Lane Management		
	Working Frequency		60GHz, 61~62GHz			
	Capture Rate		>99% (Traffic jam >95%)			
	Lane Coverage	1-	~4 Lanes (Recognition ≥95% individually)		
Radar	Tracking Target		Up to 32			
	Speed Detection Range & Accuracy	+	5km/h~±200km/h; ±0.36km/h(Accurac	y)		
	Speed Detection Range & Accuracy					
	Detection Distance & Accuracy		Up to 90m; ±0.4m(Accuracy)			

API, HTTP, TCP, ONVIF Profile G & Q & S & T

31 | Milesight Intelligent Traffic Cameras Milesight Intelligent Traffic Cameras | 32

Compatibility

			Al Road Traffic Supplement	Light Pro Bullet Plus Camera		
	Model	TS2866-X4TWE /W (2MP)	TS2866-X4TWE /R (2MP)	TS8266-X4WE /W (4K)	TS8266-X4WE /R (4K)	
Appearance						
Ir	nage Sensor	1/2" Progressive	Scan CMOS	1/1.8" Progressi	ve Scan CMOS	
Mir	n. Illumination		Color: 0.00 B/W: 0Lux			
	WDR		140dB St	iper WDR		
	Lens		8~32mm, 4X	Optical Zoom		
F	ield of View		H44°~H13°/D51°	~D15°/V25°~V7°		
	Max. Vehicle Speed	200km/h				
	Recognition Accuracy	>95%				
	Coverage	Support simultaneous detection of 4 regions				
Road Traffic	Country Region Supported		More than 80 cou	ntries and regions		
Management	Illumination Distance	Up t	o 70m during the day; Up to 45	m during the night with illuminatio	n	
	Attributes Identification	Plate Col	or, Vehicle Type, Vehicle Color,	Vehicle Brand, No-plate Vehicle C	apture	
	Smart Traffic Function	Evi		Counting Based on Vehicle Type, Management		
Illuminator	Supplement Light	White LED Light	IR LED Light	White LED Light	IR LED Light	
munimator	Light Bead	6 (For White LED Light)	9 (For IR LED Light)	6 (For White LED Light)	9 (For IR LED Light)	
	Light Control	Auto/Always On/Off/Customize				
	Interface		RS485, Audio I/O, Alarm I/	O*2, Ethernet Port, DC 12V		
C	ompatibility		API, HTTP, TCP, Wiegand Proto	col, ONVIF Profile G & Q & S & T		

			Al Road Traffic 5G Pro Bullet Plus Camera
	Model		TS2866-X4TGPC(2MP)
ļ	Appearance		
In	mage Sensor		1/2" Progressive Scan CMOS
	Lens		8~32mm, 4X Optical Zoom
F	ield of View		H44°~H13°/D51°~D15°/V25°~V7°
Mir	n. Illumination		Color: 0.002Lux@F1.6 B/W: 0Lux with IR on
	WDR		140dB Super WDR Pro
Mir	n. Illumination		H.265°/H.265(HEVC)/H.264°/H.264/MJPEG
	Max. Vehicle Speed		200km/h
	Recognition Accuracy		>95%
	Coverage		Support simultaneous detection of 4 regions
Road Traffic	Country Region Supported		More than 80 countries and regions
Management	Illumination Distance		Up to 70m during the day; Up to 35m during the night with illumination
	Attributes Identification		Plate Color, Vehicle Type, Vehicle Color, Vehicle Brand, No-plate Vehicle Capture
	Smart Traffi	c Function	Evidence Camera Linkage, Vehicle Counting Based on Vehicle Type, Specific Lane Management
	White/Bla	ack List	Up to 1000 records inside the camera
	LPR Smar	t Search	Support
	Wireless Com	munication	Support 5G/4G/3G
	Frequency	5G NR	n1/n2/n3/n5/n7/n8/n12/n20/n28/n41/n66/n71/n77/n78/n79
Mobile Communication	Bands	LTE-FDD	B1/B2/B3/B4/B5/B7/B8/B9/B12/B13/B14/B17/B18/B19/B20/B21(TBD)/B25/B26/B28/B29/B30/B32/B66/B71
Parameter	Wireless Transmission	SA	DL 3.3Gbps; UL 250Mbps
	Speed	NSA	DL 3.4Gbps; UL 200Mbps
	SIM C	ard	Nano SIM
	Interface		1*RJ45 10M/100M Ethernet Port
C	ompression		G.711/AAC/G.722/G.726

		Al Road Traffic P	TZ Bullet Camera	Al Road Traffic PTZ Bullet Plus Camera	
	Model	TS2961-X12TPE(2MP)	TS5361-X12PE(5MP)	TS2867-X5TPC(2MP)	
A	Appearance				
In	nage Sensor	1/2.8" Progress	sive Scan CMOS	1/2" Progressive Scan CMOS	
	Lens	5.3~64mm, 12	X Optical Zoom	11~55mm, 5X Optical Zoom	
F	ield of View	H61°~H5°/D69°~D5°/V36°~V2°	H57°~H4°/D69°~D5°/V44°~V1°	H34°~H8°/D39°~D9°/V20°~V4°	
Ma	x. Frame Rate	90fps@(1920x1080)	30fps@(2592x1944)	100fps@(1920x1080)	
	WDR	140dB Super WDR	120dB Super WDR	140dB Super WDR Pro	
Vide	o Compression		H.265*/H.265(HEVC)/H.	264*/H.264/MJPEG	
Max. Vehicle Speed	200km/h				
	Recognition Accuracy		>95%		
	Coverage		Support simultaneous de	etection of 4 regions	
Road Traffic Management	Illumination Distance		uring the day; night with illumination	Up to 110m during the day; Up to 50m during the night with illumination	
	Attributes Identification	Pla	te Color, Vehicle Type, Vehicle Color, Ve	/ehicle Brand, No-plate Vehicle Capture	
	Smart Traffic Detection		Evidence Camera Linkage, Vehicle C Specific Lane M		
	Pan Range/Pan Speed	360°endless / Pan Mar Pan Preset S	nual Speed: 0.1°~50°/s, Speed: 50°/s	360°endless / Pan Manual Speed: 0.1°~60°/s Pan Preset Speed: 60°/s	
PTZ	Tilt Range/Tilt Speed	-45°~30° / Tilt Manu Tilt Preset S		-45°~30° / Tilt Manual Speed: 0.1°~30°/s, Tilt Preset Speed: 30°/s	
	Preset/Patrol/Pattern		8 Patrols, up to 48 presets	each patrol, 4 patterns	
	Interface	Audio I/O (Optional), Alarm I/O	(Optional), PoE (802.3at), DC 12V	Audio I/O, Alarm I/O, PoE (802.3at), DC 12V	
C	ompatibility		API, HTTP, TCP, ONVIF F	Profile G & O & S & T	

		Al Road Traffic Spe	ed Dome Camera	
	Model	TS2841-X36TPC(2MP) TS2841-X36TPC(2MP) (2MP)		
,	Appearance		A. a. r	
In	mage Sensor	1/2" Progressiv	e Scan CMOS	
	Lens	5.7~205.2mm, 36	X Optical Zoom	
F	Field of View	H63°~H3°/D69°~	D3°/ V38°~V1°	
Ma	x. Frame Rate	60Hz/50Hz: 100fps@(1920x1080,	1280x960, 1280x720, 704x576)	
	WDR	140dB Supe	r WDR Pro	
Vide	o Compression	H.265 ⁺ /H.265(HEVC)/H	1.264 ⁺ /H.264/MJPEG	
	Max. Vehicle Speed	200km/h		
	Recognition Accuracy	>95%		
	Coverage	Support simultaneous detection of 4 regions		
Road Traffic Management	Illumination Distance	Up to 290m during the day; Up to 110r	m during the night with illumination	
	Attributes Identification	Plate Color, Vehicle Type, Vehicle Color, V	ehicle Brand, No-plate Vehicle Capture	
	Smart Traffic Detection	Evidence Camera Linkage, Vehicle Specific Lane N		
	Pan Range/Pan Speed	360°endless / Pan Manu Pan Preset Sp		
PTZ	Tilt Range/Tilt Speed	-5°~90° / Tilt Manual : Tilt Preset Sp		
	Preset/Patrol/Pattern	8 Patrols, up to 48 presets	s each patrol,4 patterns	
	Wiper	ě	Support	
	Interface	RS485, Audio I/O, 4*Alarm In, 2*A	arm Out, PoE (802.3at), AC 24V	
С	Compatibility	API, HTTP, TCP, ONVIF	Profile G & Q & S & T	

m 33 | Milesight Intelligent Traffic Cameras | 34 me

		Al Road Traffic Parking Detection Pro Bullet Plus Camera
	Model	TS8266-FPE /P (2MP)
	Appearance	
1	mage Sensor	1/1.8" Progressive Scan CMOS
	Lens	Motorized 3.6~10mm@F1.4
	Field of View	H116°~H48°/D134°~D55°/V65°~V27°
Mi	in. Illumination	Color: 0.009Lux@F1.4 B/W: 0Lux with IR on
	WDR	120dB Super WDR
	Smart Traffic Function	Parking Detection, Parking Violation Detection
	Detection Space	Support simultaneous detection of 4 parking spaces
		Support simultaneous detection of 2 illegal parking areas
Road Traffic	Recognition Accuracy	98%
Management	Attributes Identification	Plate Color, Vehicle Type, Vehicle Color, Vehicle Brand, No-plate Vehicle Capture
	Country Region Supported	More than 80 countries and regions
	Parking Smart Search	Support
10.1	Max. Image Resolution	30fps@(3840x2160)
Video	Video Compression	H.265 ⁺ /H.265(HEVC)/H.264 ⁺ /H.264/MJPEG
Interface	Interface	Audio I/O, Alarm I/O, PoE (802.3at), DC 12V
	Network Storage	NAS(Support NFS, SMB/CIFS), ANR
Network	Protocol	IPv4/IPv6, ARP, TCP, UDP, RTCP, RTP, RTSP, RTMP, HTTP, HTTPS, DNS, DDNS, DHCP, FTP, NTP, SMTP, SNMP, UPnP, Bonjour, SIP, PPPoE, VLAN, 802.1x, QoS, IGMP, ICMP, SSL
	Compatibility	API, HTTP, TCP, ONVIF Profile G & Q & S & T

4G Solar-powered Traffic Sensing Camera

SOLAR POWERED / RADAR TRIGGER / WI-FI SUPPORTED / 3-AXIS MECHANICAL DESIGN / MQTT













- KEY FEATURES
- Solar Power Supported
- 4G LTE

- Low Power Consumption
 Radar Triggered
 Quick Start Capture
 Wi-Fi Supported for Quick Configuration

			4G Solar-powered Traffic Sensing Camera
	Model		SC211-NA/EU/AU(2MP)
	Capture Rate		≥95%
	Optimal Capture Distance		6m (With 6mm lens) 15m~20m (With 16mm lens)
Capture Performance	Capture	Range	3~15m (With 6mm lens) 10~25m (With 16mm lens)
Performance	Nighttime Cap	ture Distance	Up to 15m (With 6mm lens) Up to 25m (With 16mm lens)
	Capture Speed		Be recommended to use when the vehicle speed <30km/h (With 6mm lens); Be recommended to use when the vehicle speed <70km/h (With 16mm lens)
	WLAN		802.11n/802.11b/802.11g
Wireless Network	Cellular		4G LTE NA: B2/B4/B5/B12/B13/B25/B26 EU: B1/B3/B7/B8/B20/B28 AU: B1/B2/B3/B4/B5/B7/B8/B28/B66
	SIM Card		Mini SIM
	Lens		16mm/6mm
Lens	Field of View		H19.4° /D22.2° /V11° (16mm) H52.8°/D60.4°/V29.7° (6mm)
Image	Max. Res	solution	1920×1080
	GP	s	Built-in High-accuracy GPS Module
	Proto	ocol	MQTT
General		Power	≥35W
oundu	Solar Power	ocv	<22V
		Connector	MC4
	Power S	Supply	USB Type-C

Milesight Entrance & Exit Management

ONVIFICOST









KEY FEATURES

- Excellent Capture Performance
 Al-empowered LPR

- Plate Management & Search
 Evidence Camera Linkage
 Extensive Compatibility

		Entrance & Exit AI LPR Bullet Camera	Entrance & Exit AI LPR Pro Dome Camera
N	fodel	MS-C2964-RFLPE(2MP)	MS-C2972-RFLPE(2MP)
Арр	earance	0.5	Moigu
lmag	e Sensor	1/2.8" Progress	ive Scan CMOS
ı	_ens	Motorized 2.7~	13.5mm@F1.4
Field	l of View	H111°~H34°/D130°~D39°/V60°~V19°	H115°~H34°/D135°~D39°/V62°~V19°
Max. Frame Rate		60Hz: 60fps@(1920x1080, 1280x960, 1280x720, 704x576) 50Hz: 50fps@(1920x1080, 1280x960, 1280x720, 704x576)	
1	WDR	140dB Super WDR	140dB Super WDR
Video C	ompression	H.265+/H.265(HEVC)/I	H.264 ⁺ /H.264/MJPEG
	Max. Vehicle Speed	200k	m/h
	Recognition Accuracy	>98	3%
Entrance & Exit Management	Coverage	Support simultaneous	detection of 4 regions
Wallagement	Illumination Distance	Up to 25m during the day; Up to 20n	n during the night with illumination
	Attributes Identification	Plate Color, Vehicle Type, Vehicle Color, Vehicle Brand, No-plate Vehicle Capture	
In	terface	PoE (802.3af), DC 12V; Audio I/O, Alarm I/O, PoE (802.3af), DC 12V (Multi-interface Version)	Built-in Microphone and 1 Audio Output Interface, Alarm I/O, PoE (802.3af), DC 12V
Com	npatibility	API, HTTP, TCP, ONVII	Profile G & Q & S & T

		Entrance & Exit Supplement Light AI L	PR Pro Bullet Plus Camera	
ji	Model	MS-C2966-RFLWPE /W (2MP)	MS-C2966-RFLWPE /R (2MP)	
Ар	pearance		8	
Ima	ge Sensor	1/2.8" Progressive So	ean CMOS	
	Lens	Motorized 2.7~13.5n	nm@F1.4	
Field of View		H113°~H33°/D130°~D38°/V60°~V18°		
Max.	Frame Rate	60Hz: 60fps@(1920x1080, 1280x9 50Hz: 50fps@(1920x1080, 1280x9		
	WDR	140dB Super W	/DR	
Video (Compression	H.265+/H.265(HEVC)/H.264	*/H.264/MJPEG	
	Max. Vehicle Speed	200km/h		
	Recognition Accuracy	>98%		
Entrance & Exit Management	Coverage	Support simultaneous detec	ction of 4 regions	
Wallagement	Illumination Distance	Up to 25m during the day; Up to 25m duri	ng the night with illumination	
	Attributes Identification	Plate Color, Vehicle Type, Vehicle Color, Vehic	le Brand, No-plate Vehicle Capture	
	Supplement Light	White LED Light	IR LED Light	
Illuminator	Light Bead	6	9	
	Light Control	Auto/Always On/Off/0	Customize	
In	terface	Wiegand Interface, Audio I/O, Alarm I	/O, PoE (802.3at), DC 12V	
Con	npatibility	API, HTTP, TCP, Wiega ONVIF Profile G & C		

■ 35 | Milesight Intelligent Traffic Cameras Milesight Intelligent Traffic Cameras | 36

Milesight Parking Management

ONVIFICOST



















KEY FEATURES

- Al-powered LPR Algorithm
 LoRa Outstanding Performance
 Low Power Consumption
 Flexible Compatibility
 Easy Deployment
 Excellent Scene Adaptability

AloT Indoor Parking Management Suite

		Entrance & Exit Supplement Light	AI LPR Pro Bullet Plus Camera		
	Model	MS-C2966-RFLWPE /W (2MP)	MS-C2966-RFLWPE /R (2MP)		
Ap	ppearance		8		
Ima	age Sensor	1/2.8" Progressive	e Scan CMOS		
	Lens	Motorized 2.7~13	3.5mm@F1.4		
Fie	eld of View	H113°~H33°/D130°~	H113°~H33°/D130°~D38°/V60°~V18°		
Max. Frame Rate		60Hz: 60fps@(1920x1080, 1280x960, 1280x720, 704x576) 50Hz: 50fps@(1920x1080, 1280x960, 1280x720, 704x576)			
	WDR	140dB Supe	er WDR		
Video	Compression	H.265*/H.265(HEVC)/H.	264*/H.264/MJPEG		
	Max. Vehicle Speed	200km	/h		
	Recognition Accuracy	>98%			
Entrance & Exit	Coverage	Support simultaneous de	etection of 4 regions		
Management	Illumination Distance	Up to 25m during the day; Up to 25m	during the night with illumination		
	Attributes Identification	Plate Color, Vehicle Type, Vehicle Color, Ve	hicle Brand, No-plate Vehicle Capture		
	Supplement Light	White LED Light	IR LED Light		
Illuminator	Light Bead	6	9		
	Light Control	Auto/Always On/O	off/Customize		
1	nterface	Wiegand Interface, Audio I/O, Ala	rm I/O, PoE (802.3at), DC 12V		
Co	mpatibility	API, HTTP, TCP, Wi ONVIF Profile G			

		LoRaWAN®Ultrasonic Distance/Level Sensor	
Model		EM310-UDL	
Арр	earance		
	Technology	LoRaWAN®	
Wireless Transmission	Frequency	CN470/IN865/RU864/EU868/US915/AU915/KR920/AS923	
Hansinission	TxPower	16 dBm (868 MHz)/22 dBm (915 MHz)/19 dBm (470 MHz)	
	Sensitivity	-137 dBm@300bps	
	Mode	OTAA/ABP Class A	
Measurement	Detection Range	3 – 450 cm	
	Detection Accuracy	± (1+0.3%*S) cm, S=distance	
	Distance Resolution	1 mm	
Conf	figuration	NFC Configuration via Mobile App	
Pow	er Supply	2 x 3500 mAh ER17505 Li-SOCI2 battery	
Bat	tery Life	Up to 10 years (10 min interval + 20 triggers per day)	
Ingress	s Protection	IP67	

		Semi-Industrial LoRaWAN® Gateway	Mini LoRaWAN® Gateway
Model		UG65	UG63
Appe	arance	Marya Carlo	Marga
	CPU	Quad-core 1.5 GHz, 64-bit ARM Cortex-A53	528 MHz, ARM Cortex-A7
Hardware System	Memory	512 MB DDR4 RAM	256 MB DDR4 RAM
	Flash	8 GB eMMC	4 GB eMMC
	Antenna	2 x Internal Antennas (Optional: 1 x 50 Ω N-Female External Connector)	2 x Internal Antennas
	Channel	8 (Half/Full-duplex)	
LoRaWAN®	Frequency Ban	CN470/IN865/EU868/RU864/US915/AU915/KR920/AS923-1&2&3&4	
LORAWAN	Sensitivity	-140dBm Sensitivity @292bps	
	Output Power	27dBm Max	
	Protocol	V1.0 Class A/Class B/Class C and V1.0.2 Class A/Class B/Class C	
Ethernet Interface	Port	1 × RJ45 (PoE PD supported)	
	Physical Layer	10/100/1000 Base -T (IEEE 802.3)	
	Data Rate	10/100/1000 Mbps (Auto-Sensing)	10/100Mbps (Auto-Sensing)
WI-FI Interface	Standards	IEEE 802.11 b/g/n, 2.4GHz	
	Mode	AP or Client mode	Full or Half Duplex (Auto-Sensing)
Power Supply nd Consumption	Power Input	DC Jack Connector for 9-24 VDC power supply 1 x 802.3 af PoE input	1 x 802.3af standard PoE input 5V by Type-C Port
	Power Consumption	Typical 2.9 W, Max 4.2 W	Max 3.3 W
Cellular Interface (Optional)	Antenna	Internal Antenna	*
	SIM Slot	1 (mini SIM-2FF)	0.70
Ingress Protection		IP65	IP30

Al Outdoor Parking Management Solution

		Al Outdoor Parking Management Pro Bullet Plus Camera		
Model		PMC8266-FPC(4K)		
Appearance				
Image Sensor		1/1.8" Progressive Scan CMOS		
Lens		Motorized 3.6~10mm@F1.4		
Field of View		H116°~H48°/D134°~D55°/V65°~V27°		
Max. Frame Rate		60Hz: 30fps@(3840x2160, 3072x2048, 2592x1944, 2592x1520, 2048x1536, 1920x1080, 1280x960, 1280x720, 704x57 50Hz: 25fps@(3840x2160, 3072x2048, 2592x1944, 2592x1520, 2048x1536, 1920x1080, 1280x960, 1280x720, 704x57		
WDR		120dB Super WDR		
Video Compression		H.265'/H.265(HEVC)/H.264'/H.264/MJPEG		
Parking Management	Parking Application Mode	Occupancy Detection/Parking Detection		
	Parking Space Detection	Up to 4 Parking Spaces for Parking Detection with LPR; Up to 100 Parking Spaces@10m for Occupancy Detection		
	Detection Accuracy	>98%		
	Data Report	Triggered Report: when parking space is occupied or released; Interval Report: regular report of entire parking situation		
	Mounting Height	4~8m (For Parking Detection with LPR); >3.5m (For Occupancy Detection)		
Interface		Audio I/O, Alarm I/O, PoE (802.3at), DC 12V		
Compatibility		API, HTTP, TCP, ONVIF Profile G & Q & S & T		

■ 37 | Milesight Intelligent Traffic Cameras Milesight Intelligent Traffic Cameras | 38

Milesight

Milesight is a fast-growing high-tech company delivering smart IoT and video surveillance products with a focus on IoT technologies, including Artificial Intelligence, 5G and LoRaWAN*, since 2011. With improved sensing capability and advanced IoT insights, we help customers worldwide optimize their business operation in a more efficient and sustainable way. In collaboration with a global network of distributors and system integrators, we are committed to building open ecosystems and accelerating IoT strategies to the next level.



About Milesight

INNOVATION





Milesight aims to bring customers more added value through innovative solutions, continually challenging the conventional for a smarter and safer future.

Attaching high importance to the R&D, Milesight keeps a fast and accurate turnaround to the quick developing security market and brings state-of-the-art technologies.



QUALITY



Quality is our foundation. With industry criteria embedded in the design details of Milesight products from inside out, we're in the endless pursuit of precise spirit to make perfection more perfect.











We have attained extensive international standards of certification, including CE/FCC/LVD/ROHS/ISO9001/UL, etc.

SERVICE



Milesight provides the exclusive and efficient support service that we stay close with our customers to follow the issue from beginning to end to make sure it would be well solved.



At Milesight, we treasure every customer, as a sustainable and win-win partnership is what we've long been striving for.